


# Velocity Conversion Chart for Use of Geopac Water Flow Meter

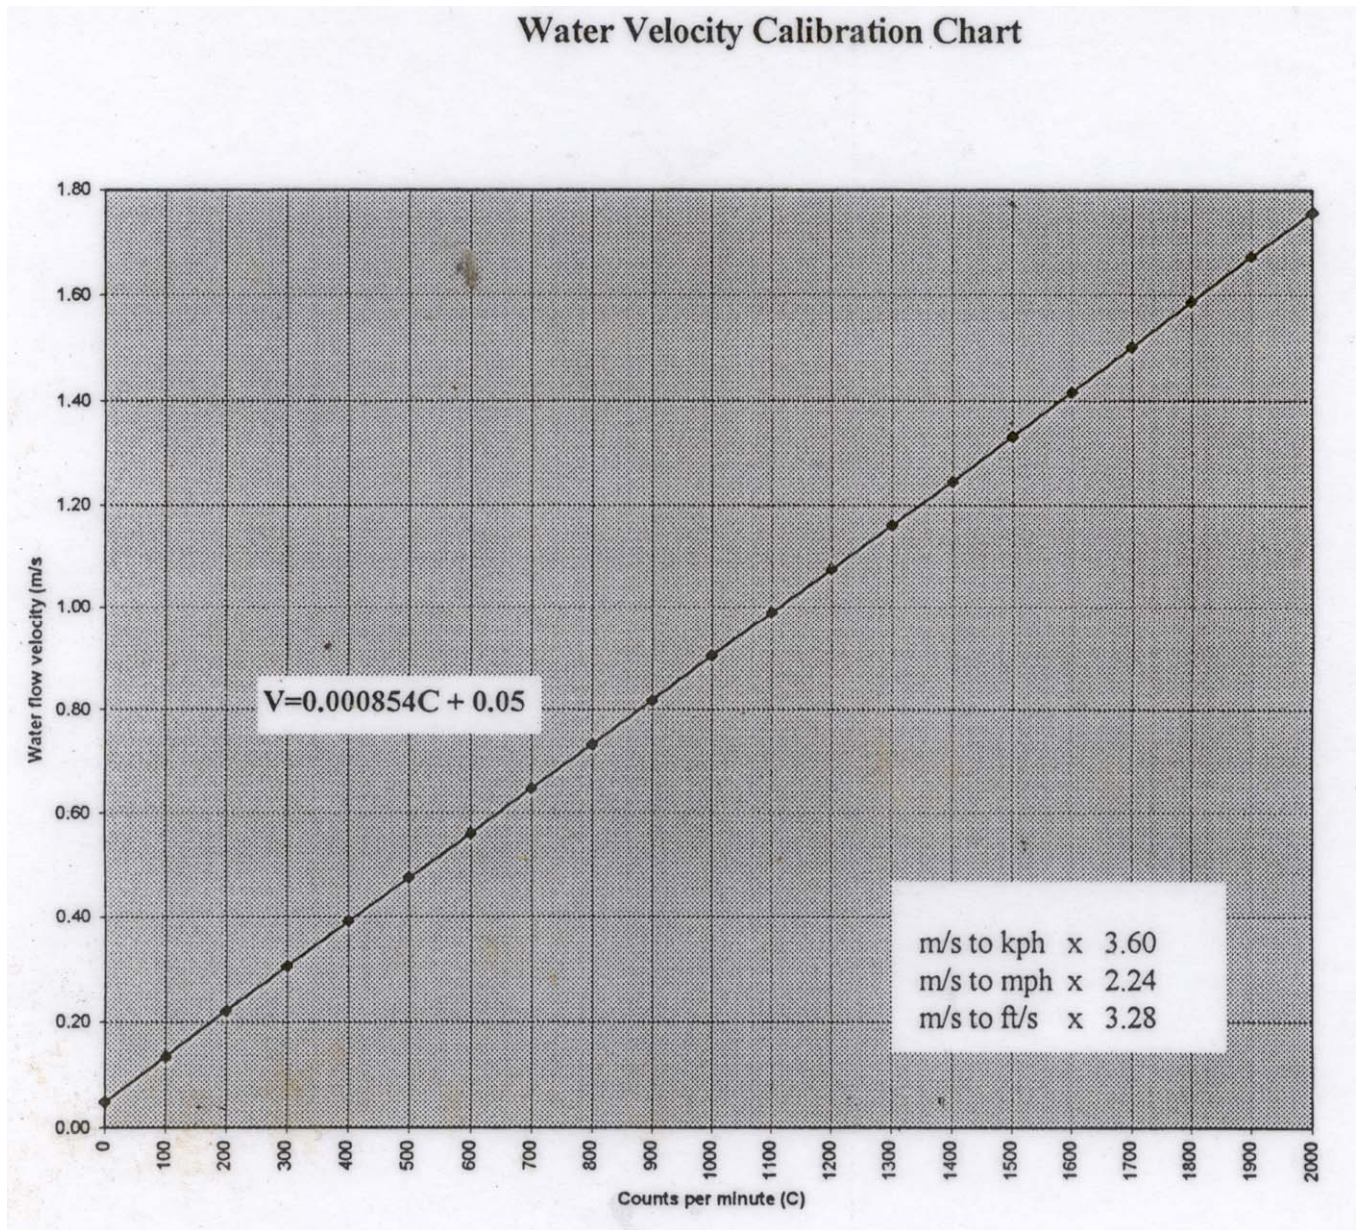

To convert flow velocity from “revolutions per minute” to m/sec;  
Multiply the count x 0.000854 and add 0.05